


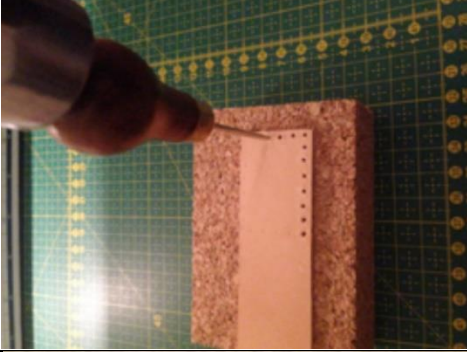
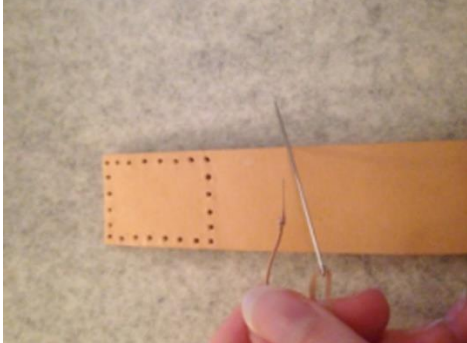


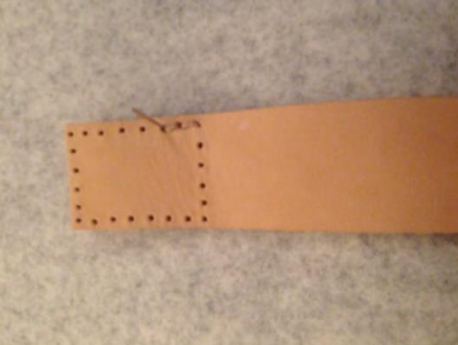

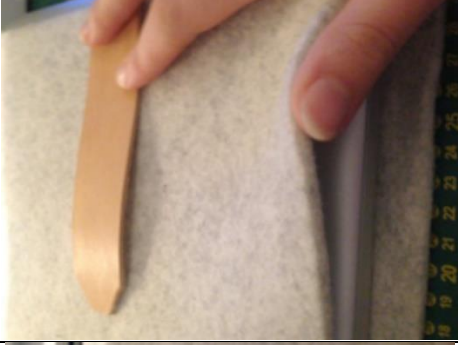


Computer sleeve in felt





The products you need:

- Leather strap 2.0/2.2 mm thick, width 30 mm
- Felt
- Scissors
- Punch tong
- Sam Browne Button
- Glue
- Awl
- Space maker
- Sewing needles, size 1
- Terylene, 1 mm, 25 metres per roll
- Cutter knife
- Ruler
- Cork
- Hammer
- Sewing machine

<p>Step 1</p> <p>Cut the felt to fit the size of your computer. Add an additional two centimeters on each side for stitching.</p>	
<p>Step 2</p> <p>Use your space maker to mark out, where your stitching holes will be punctured. Make the markings in one of the ends of the leather strap.</p>	
<p>Step 3</p> <p>Cut the other end of the strap into the desired length. You can cut off the corners of the strap as a nice detail.</p>	
<p>Step 4</p> <p>Use the awl to make stitching holes.</p>	
<p>Step 5</p> <p>Tie a knot in one end and start stitching from the back.</p>	

<p>Step 6</p> <p>Stitch all the way around. Make sure that there is thread between all the stitching holes - you will have to stick the needle through all the holes twice for this to happen.</p>	
<p>Step 7</p> <p>Finish your stitching by tying a knot on the back.</p>	
<p>Step 8</p> <p>Place your computer into the sleeve to measure out, where the Sam Browne button will be placed.</p>	
<p>Step 9</p> <p>Puncture a hole in the felt for the Sam Browne button and screw in the button.</p>	
<p>Step 10</p> <p>Mark out where on your leather, the Sam Browne button will come through from the back.</p>	

<p>Step 11</p> <p>Use your leather punch to punch a hole in the leather.</p>	
<p>Step 12</p> <p>Glue a small piece of leather on the back to ensure that the Sam Browne button doesn't scratch your computer.</p>	
<p>Step 13</p> <p>Sew together the sides inside-out by using a sewing machine.</p>	