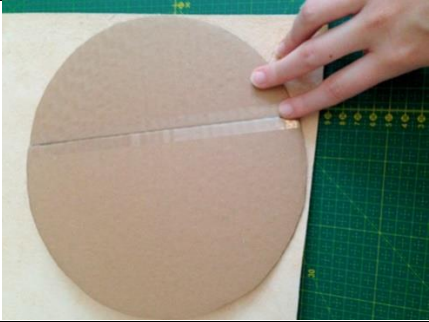

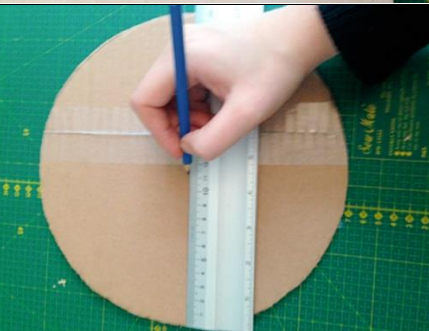
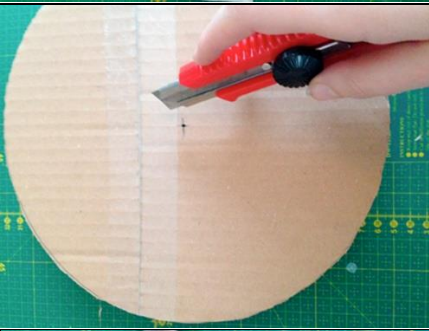





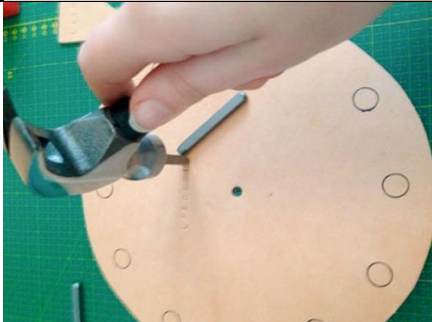


Wall clock in leather



The products you need:

- Leather
- Cutting board
- Hobby knife
- Stamps
- Glue
- Ring
- Hammer
- Ruler
- Black marker
- Pencil
- Cardboard
- Clockwork

<p>Step 1</p> <p>Cut out a piece of cardboard in the size, you want your wall clock to be. Outline the cardboard onto the back of the leather.</p>	
<p>Step 2</p> <p>Cut the leather following the outline.</p>	
<p>Step 3</p> <p>Mark the middle of the round cardboard template.</p>	
<p>Step 4</p> <p>Cut a hole large enough for the clockwork to come through the cardboard and the leather.</p>	
<p>Step 5</p> <p>Tip: use these tools for making the time indications on the leather.</p>	
<p>Step 6</p> <p>In this step, you can freely choose if you want to stamp numbers, symbols, dots, etc. onto the leather.</p>	

<p>Step 7</p> <p>Outline the stamps with a thin black marker if you want to accentuate the stamps.</p>	
<p>Step 8</p> <p>Use a hammer and stamp for stamping a name, word, pattern, etc. onto the leather.</p>	
<p>Step 9</p> <p>Glue the leather and cardboard together to stabilize the leather.</p>	
<p>Step 10</p> <p>Install the clockwork.</p>	
<p>Step 11</p> <p>When making this tutorial, we decided to attach a piece of leather string to hang the wall clock. This is, however, completely optional. If you want to attach a piece of leather string to your watch as well, just take a piece of cardboard and glue it onto the wall clock with the leather string between the two.</p>	